


Hanging with LoopLine™



Quick and easy to cut and install
2-inch loops in a continuous roll
Connects without knots or crimps
Retains strength and color over time
Durable tensile strengths from 5 lbs to 400 lbs

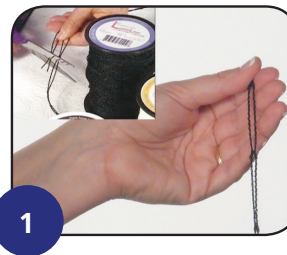



A. Cut LoopLine™ to the desired length with scissors. Make sure each line has the same number of loops so the sign will hang level. **1**



B. Insert one end of LoopLine through the opening on the ceiling clip or KlikMagnet ring. Feed the opposite end of the line completely through the first loop and pull tight to finish the connection. **2 3**

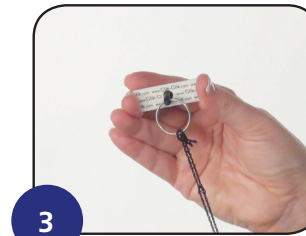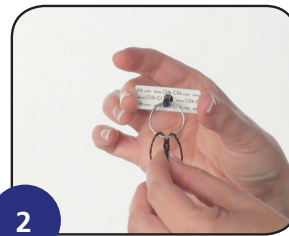

C. Insert the opposite end of the line through the sign hole or banner hanger clip. Feed the attached ceiling clip or KlikMagnet completely through the first loop and pull tight. **4 5**

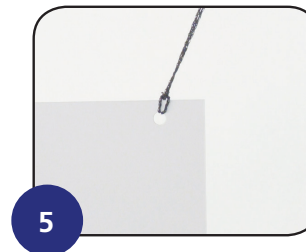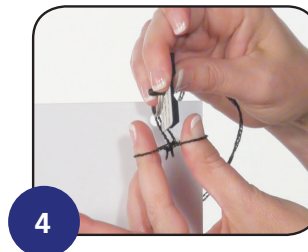

D. Reverse steps to remove LoopLine for repeated use.



ceilingoutfitters.com

877.866.2545